User Manual of Product 1:

LEVOIT Humidifiers for Bedroom Large Room Home, 6L Warm and Cool Mist Ultrasonic Air Vaporizer for Plants and Whole House, Built-in Humidity Sensor, Essential Oil Diffuser, Whisper Quiet, Timer, White

User Manual of Product 2:

LEVOIT Air Purifier for Home Allergies Pets Hair in Bedroom, HEPA Filter, Covers Up to 1095 Sq.Foot Powered by 33W High Torque Motor, Remove Dust Smoke Pollutants, 0.3 Microns, Core 300, White

Model No.: LV600HH

levoit

Hybrid Ultrasonic Humidifier

EN ES FR

Questions or Concerns?
Please contact us Mon–Fri, 9:00 am–5:00 pm PST/PDT
at **support@levoit.com** or at **(888) 726-8520**.

READ AND SAVE THESE INSTRUCTIONS

EN TABLE OF CONTENTS

Specifications	**2**
Package Contents	**3**
Safety Information	**5**
Operation	**6**
LED Display	**7**
Button Controls	**8**
Getting Started	**9**
Using Your Humidifier	**10**
Using the Aroma Box	**11**
Preventing Water Leak	**12**
Keeping Things Clean	**13**
• General Cleaning	**13**
• Cleaning the Aroma Pad	**14**
• Replacing the Remote Control Battery	**14**
• Disinfecting the Humidifier	**14**
Troubleshooting	**15**
Warranty Information	**17**
Customer Support	**17**

ES TABLE OF CONTENTS

Specifications
Package Contents
Safety Information
Operation
LED Display
Button Controls
Getting Started
Using Your Humidifier
Using the Aroma Box
Preventing Water Leak
Keeping Things Clean
- General Cleaning
- Cleaning the Aroma Pad
- Replacing the Remote Control Battery
- Disinfecting the Humidifier

Troubleshooting
Warranty Information
Customer Support

SPECIFICATIONS

Power Supply	AC 120V, 60Hz
Rated Power	280W
Effective Range	430–753 ft^2 (40–70 m^2)
Water Tank Capacity	1.5 gal (5.6 L)
Max Cool Mist Output	300 mL/h
Max Warm Mist Output	500 mL/h

SPECIFICATIONS

Power Supply	AC 120V, 60Hz
Rated Power	280W
Effective Range	430–753 ft^2 (40–70 m^2)
Water Tank Capacity	1.5 gal (5.6 L)
Max Cool Mist Output	300 mL/h
Max Warm Mist Output	500 mL/h

FR TABLE OF CONTENTS

Specifications
Package Contents
Safety Information
Operation
LED Display
Button Controls
Getting Started
Using Your Humidifier
Using the Aroma Box
Preventing Water Leak
Keeping Things Clean
- General Cleaning
- Cleaning the Aroma Pad
- Replacing the Remote Control Battery
- Disinfecting the Humidifier

Troubleshooting
Warranty Information
Customer Support

SPECIFICATIONS

Power Supply	AC 120V, 60Hz
Rated Power	280W
Effective Range	430–753 ft^2 (40–70 m^2)
Water Tank Capacity	1.5 gal (5.6 L)
Max Cool Mist Output	300 mL/h
Max Warm Mist Output	500 mL/h

EN PACKAGE CONTENTS

1 x Hybrid Ultrasonic Humidifier
1 x Remote Control
1 x 3V CR2025 Battery (Pre-Installed)
2 x Aroma Pads (1 Pre-Installed)
2 x Absorption Pads (1 Pre-Installed)
1 x Cleaning Brush
1 x User Manual

ES PACKAGE CONTENTS

1 x Hybrid Ultrasonic Humidifier
1 x Remote Control
1 x 3V CR2025 Battery (Pre-Installed)
2 x Aroma Pads (1 Pre-Installed)
2 x Absorption Pads (1 Pre-Installed)
1 x Cleaning Brush
1 x User Manual

FR PACKAGE CONTENTS

1 x Hybrid Ultrasonic Humidifier
1 x Remote Control
1 x 3V CR2025 Battery (Pre-Installed)
2 x Aroma Pads (1 Pre-Installed)
2 x Absorption Pads (1 Pre-Installed)
1 x Cleaning Brush
1 x User Manual

EN

Hybrid Ultrasonic Humidifier

Model No.: LV600HH

THANK YOU FOR PURCHASING THE LV600HH HYBRID ULTRASONIC HUMIDIFIER BY LEVOIT.

If you have any questions or concerns, please reach out to us at **support@levoit.com**. We hope you enjoy your new air purifier!

SHARE THE LEVOIT LOVE

Find @LevoitLifestyle on social media for wellness + style inspiration. We make every space mindful and chic.

@LevoitLifestyle

#LevoitLove • #LevoitLifestyle

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

General Safety

- **Only** use this humidifier as described in this manual.
- Place the humidifier and cord so that the humidifier will not be knocked over.
- When not in use, turn the machine off and disconnect from power source by removing the plug from the outlet.
- **Do not** overfill the water tank, as this may cause electric shock.
- **Do not** use this humidifier in wet environments.
- Keep the humidifier out of reach from children.
- **Do not** open the base or remove the water level sensor for self-servicing.
- **Always** unplug your humidifier from the power outlet before cleaning your humidifier or detaching the water tank from the humidifier base.
- **Always** make sure to place the humidifier on a flat, level surface before operation.
- **Only** fill the water tank with clean water. **Never** fill the water tank with any other liquids.
- **Do not** place the humidifier near sources of heat, such as stove tops, ovens, or radiators.
- **Do not** place the humidifier directly on floors, carpets, or rugs.
- **Do not** use attachments that are not recommended by the manufacturer as replacement parts for this humidifier.
- **Do not** cover the nozzle while the humidifier is on. Doing so may damage the humidifier.
- Remove the water tank from the base before moving the humidifier.
- **Do not** immerse the humidifier base, power cord, or plug in water.
- **Do not** add essential oils, supplemental water treatment liquids, or additional water filters into the water tank.
- If the humidifier is damaged or is not functioning properly, stop using it and contact **Customer Support** immediately (see page 17).

Plug and Cord

- Ensure that the plug fits properly into a polarized socket.
- **Do not** handle the power cord or plug with wet hands. Keep the plug and power cord away from liquids.
- Your humidifier has a polarized plug (one prong is wider than the other), which fits into a polarized outlet only one way. This is a safety feature to reduce the risk of electric shock. If the plug does not fit, reverse the plug. If it still does not fit, **do not** use the plug in that outlet. **Do not** bypass this safety feature.


Not for commercial use. Household use only.

READ AND SAVE THESE INSTRUCTIONS

EN


GETTING TO KNOW YOUR HUMIDIFIER

A. Nozzle Cap
B. Nozzles
C. Handle
D. Water Tank
E. Base
F. Aroma Box
G. LED Display
H. Control Panel
I. Remote Control
J. Mist Tube
K. Mist Channel
L. Absorption Pad
M. Inner Chamber
N. Power Cord
O. Water Tank Cap

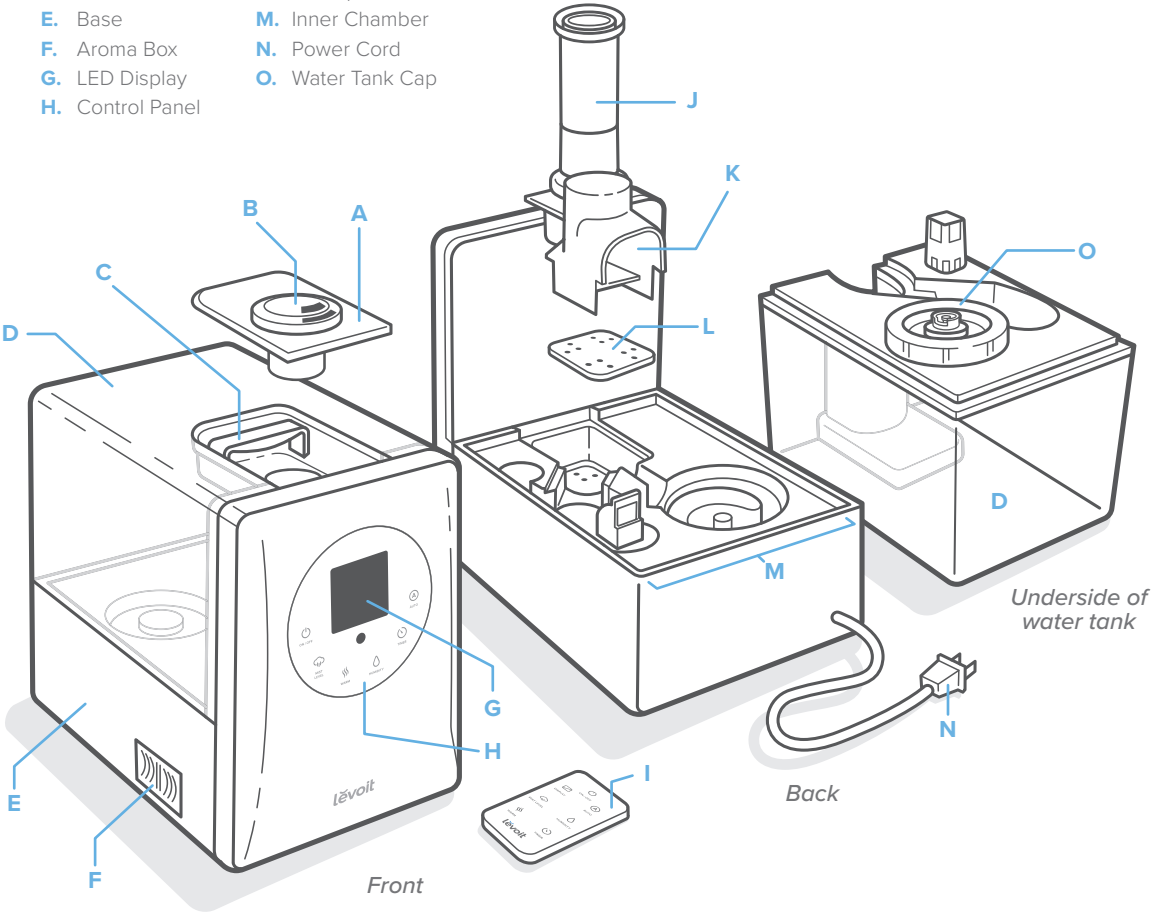

LED DISPLAY

A. High Temperature Warning
B. Set Humidity Function
C. Relative Humidity (RH) Level
D. Mist Level
E. Timer
F. Warm Mist Setting
G. Auto Mode Indicator
H. Low Water Indicator

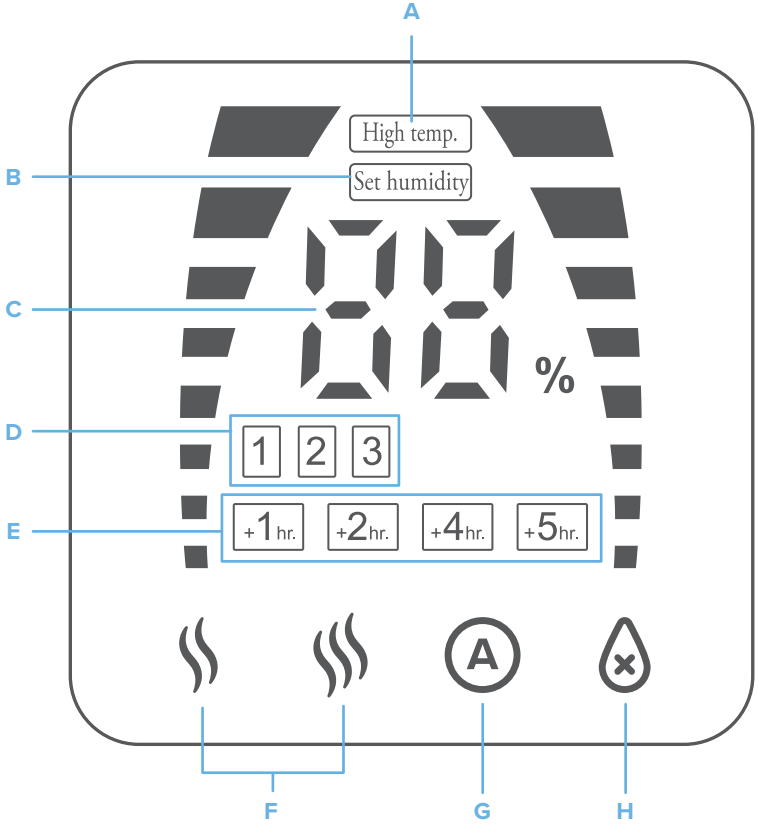

BUTTON CONTROLS

Power Button
- Tap to turn your humidifier on or off.

Mist Level Button
- Tap repeatedly to change the mist level. There are 3 mist level settings.

Note:
- *When you first turn on the humidifier, the default mist level is 2.*

Warm Mist Button
- Tap repeatedly to change or turn on/off the warm mist setting.

Note:
- *Be careful when using the warm mist function, as the mist may be hot.*
- *The warm mist function can be used while Auto Mode is on.*

Humidity Level Button
- Tap repeatedly to change the Relative Humidity (RH) percentage between 40% and 80%. The humidity level on the display will flash 5 times to confirm your selection. To exit the humidity function, tap and hold for 3 seconds.

Note:
- *Once the humidity percentage of the environment reaches the set RH percentage, it will automatically stop misting. It will start misting again when the humidity drops to 5% below the set level.*
- *After setting the RH percentage, the display will alternate between showing the set RH percentage and the current humidity level.*

Timer Button
- Tap repeatedly to choose a time.
- When you stop tapping, the display will flash 3 times and the timer will start.
- To exit the timer function, tap repeatedly or tap and hold until it shows "-- --".
- The humidifier will automatically power off once the timer is finished.

Auto Mode Button
- Tap to start Auto Mode. The humidifier will produce mist as needed to maintain the relative humidity (RH) at a comfortable level.

Relative Humidity	Mist Level
< 60% RH	3
60%–63% RH	2
64%–67% RH	1
> 68% RH	Humidifier automatically shuts off

Note:
- *Changing the mist level while in Auto Mode will cancel the Auto Mode function.*
- *The timer can be set while the humidifier is in Auto Mode.*

GETTING STARTED

1. Remove the nozzle cap from the top of the water tank. [*Figure 1.1*]
2. Lift the handle, then pull up on the handle to remove the water tank from the base. [*Figure 1.1*]
3. Flip the tank over and twist the water tank cap counterclockwise to remove it. [*Figure 1.2*]
4. Fill the tank with cold or room temperature water. The maximum capacity is 1.5 gallons (5.6 L).

Note:

- *Fill the water tank with distilled water, at least half full.*
- ***Do not** fill the water tank with hot water. Only use cold or room temperature water.*
- ***Do not** add water through the nozzle, the mist tube, or the inner chamber.*
- ***Do not** add essential oils through the nozzle, the inner chamber, or into the water tank.*

5. Replace the water tank cap. Twist the cap clockwise to secure it tightly to the water tank.
6. Carefully place the water tank back onto the base, aligning the water tank cap with the inner chamber.

Note:

- *Wipe off any excess water on the top and bottom of the base before replacing the water tank.*

7. Place the nozzle cap back on the top of the water tank.

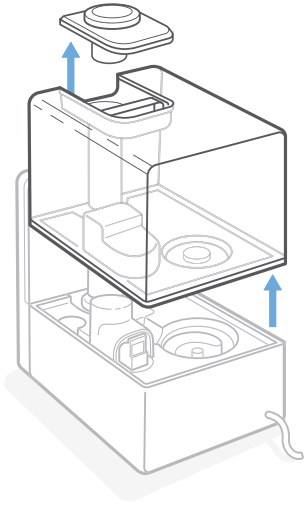


Figure 1.1

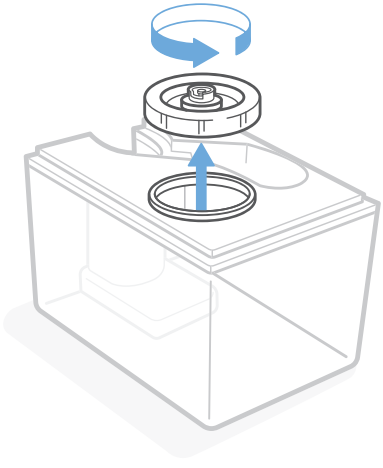


Figure 1.2

OPERATION

General Operation

1. Place the humidifier on level, elevated surfaces, such as tables or nightstands. Make sure the room is well-ventilated.

   Note:
   - *Position the humidifier at least 12 inches (30 cm) away from walls to prevent them from getting wet. [Figure 2.1]*
   - ***Do not** place the humidifier directly on floors, carpets, or rugs.*
   - *Turn the humidifier's nozzle away from any furniture to prevent your furniture from getting wet.*

2. Plug in the humidifier. The humidifier will chime.
3. Tap ⏻ once to turn on the humidifier. The humidifier will start misting. If there is no water in the tank, 💧 will light up. Unplug the humidifier and refill the water tank. (See **Getting Started**, page 9).

   Note:
   - ***Do not** attempt to inhale the mist directly from the nozzle.*

4. **(Optional)** Press the mist level controls to change the mist level.
5. Press ⏻ to turn off the humidifier.

   Note:
   - *If the relative humidity in your room exceeds 68%, use the low mist setting or turn off the humidifier.*
   - *When you first turn on the humidifier, the default mist level is 2.*
   - *There are 2 nozzles on the nozzle cap that can rotate 360° to diffuse mist in any direction.*

Turning Off the Display

While the humidifier is operating, the display will automatically dim itself after 30 seconds. If you want to turn off the display, press and hold Ⓐ for 3 seconds. To turn the display back on, press any button, except ⏻.

Automatic Shut Off

The humidifier will automatically turn off and 💧 will appear when all of the water in the tank has been diffused. The display will continue showing 💧 until more water is added to the water tank.

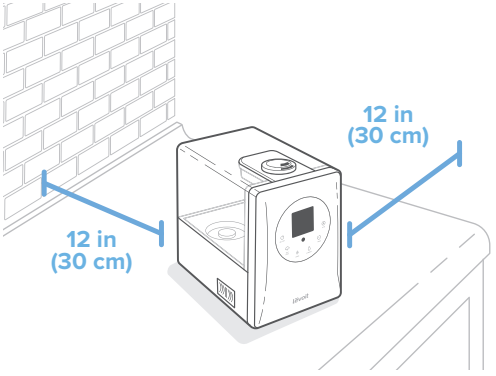


Figure 2.1

USING THE AROMA BOX

Your humidifier can be used as an aroma diffuser to provide added comfort in your home.

1. Turn off and unplug the humidifier.
2. Locate the aroma box at the back of the base.
3. Pull out the aroma box. [*Figure 3.1*]
4. Put 2-3 drops of essential oil on the aroma pad. [*Figure 3.2*]
5. Replace the aroma box. Fill the water tank with water and place it back on the base (see **Getting Started**, page 9). [*Figure 3.3*]
6. Plug in and turn on the humidifier.

Note:

- *You can also add medicated vaporizing steam liquid to the aroma pad.*
- *The aroma pad can be cleaned and reused after diffusing essential oils (see **Cleaning the Aroma Pad**, page 14).*

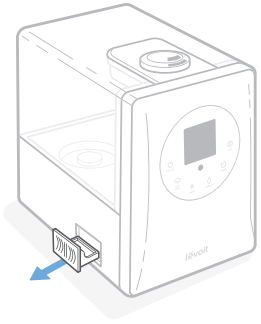


Figure 3.1

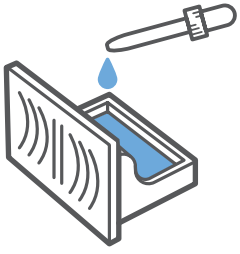


Figure 3.2

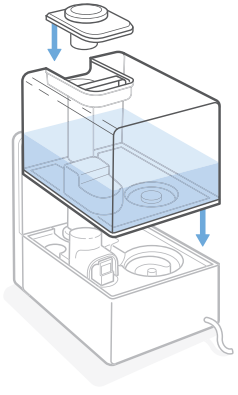


Figure 3.3

PREVENTING WATER LEAKS

If not placed properly, the water tank on your humidifier may leak.

- Make sure the silicone ring in the water tank cap is secured at all times. [*Figure 4.1*]
- Twist and secure the cap tightly onto the water tank. [*Figure 4.2*]

  Note: *A small gap between the cap and the tank is normal.*

- Before moving the humidifier, remove the tank from the base and empty any excess water from the inner chamber.
- Wipe off any excess water on the top and bottom of the base.
- **Do not** shake the humidifier or place it on an inclined surface. Make sure to place the humidifier on a flat, level surface. [*Figure 4.3*]

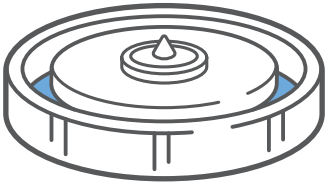


Figure 4.1

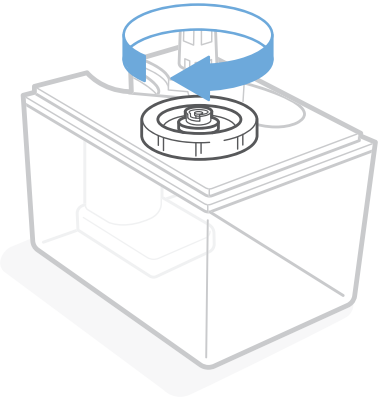


Figure 4.2

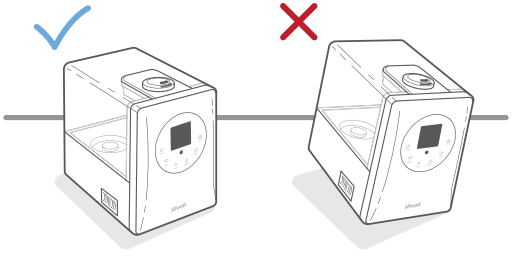


Figure 4.3

KEEPING THINGS CLEAN

CAUTION:

- **Always** make sure the humidifier is unplugged when cleaning.
- The water in the inner chamber near the transducer may still be warm after turning off the humidifier. Allow the humidifier to cool before cleaning. Use caution when pouring out the water.
- **Do not** use liquid detergents.
- Use distilled water instead of tap water to prevent hard water buildup in your humidifier.
- **Do not** submerge base in water.
- Clean your humidifier at least once a month.

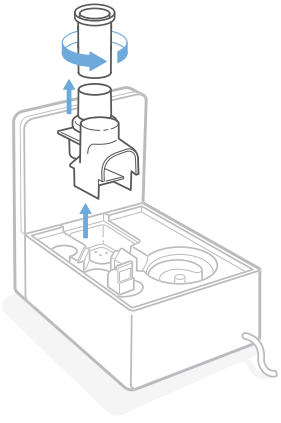


Figure 5.1

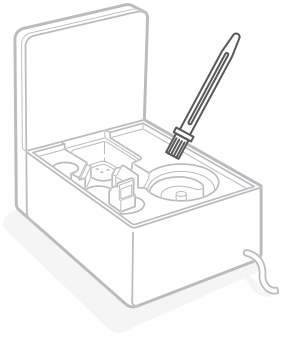


Figure 5.2

General Cleaning

1. Unplug the humidifier.
2. Remove the nozzle cap from the water tank. Rinse the nozzle and the cover under clean, running water. Set it aside to air dry.
3. Remove the water tank from the base and pour out any excess water from the inner chamber. Fill the tank with 2 cups of distilled white vinegar and 2 cups of water. Replace the cap and gently shake to coat all sides of the water tank.
4. Remove the mist channel and mist tube. Detach the mist tube from the mist channel by twisting the tube counterclockwise. [*Figure 5.1*] Rinse both parts in clean water and dry thoroughly.
5. Remove the absorption pad inside the heating element and rinse under clean water. Dry the pad with a clean, dry cloth.
6. Add 1 cup of distilled white vinegar to the inner chamber.
7. Allow the vinegar to soak inside both the water tank and inner chamber for 30 minutes.
8. Use the included cleaning brush to remove any scale buildup inside the water tank or in the inner chamber. [*Figure 5.2*]
9. Pour out the vinegar from the water tank and the inner chamber and thoroughly rinse with warm water.

   ***Note: Do not** submerge the base in water.*

10. Dry all parts with a clean, dry cloth. Make sure all parts of the humidifier are completely dry before reassembling or storing.

Cleaning the Aroma Pad

1. Pull out the aroma box.
2. Remove the aroma pad from the aroma box.
3. Rinse the pad under warm, running water.
4. Dry with a clean cloth and place it back into the aroma box.

NOTE:

- ***Do not*** *pour liquid cleaners or detergents into the aroma pad and box.*

Replacing the Remote Control Battery

1. Remove the battery compartment by pinching the tab in and pulling the compartment out. [*Figures 6.1–6.2*]
2. Remove the old battery.
3. Replace with a new 3V CR2025 battery.

NOTE: *Make sure that the polarities match.*

4. Replace the battery compartment.

NOTE: *The remote control will not work if held more than 16 ft (4.8 m) away from the humidifier.*

Disinfecting the Humidifier

Disinfect the water tank before or after storing the humidifier for long periods of time. You should also disinfect if there is any mold buildup inside the water tank or inner chamber.

1. Clean the water tank as instructed in **General Cleaning** (page 13).
2. Fill the water tank with 1 teaspoon of bleach and 1 gallon of clean water. Reseal the water tank, then gently shake the water tank to ensure all of the sides are coated with the mixture.
3. Put ¼ teaspoon of bleach and 1 cup of clean water into the base.
4. Allow the solutions in both parts to sit for 30 minutes.
5. Pour out the mixtures from both the water tank and base. Rinse both parts thoroughly under clean, running water.
6. Allow the water tank and base to completely air dry before reassembling the humidifier.

Note:

- ***Always*** *wear gloves to protect your hands while using bleach.*
- *A 3% hydrogen peroxide solution may also be used to disinfect the humidifier.*
- ***Do not*** *use the humidifier immediately after disinfecting. This may be a health hazard.*

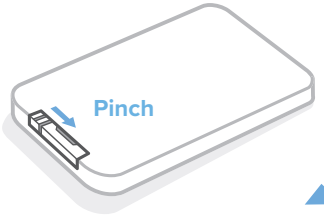


Figure 6.1

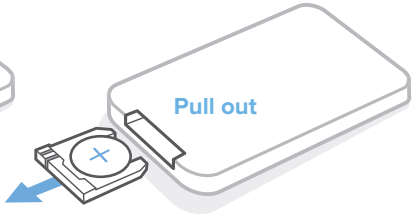


Figure 6.2

TROUBLESHOOTING

Problem	Possible Causes	Solution
No mist coming out of vent.	Humidifier is not plugged in.	Plug the humidifier into a powered electrical outlet.
	Humidifier is not turned on.	Press ⏻ to turn on the humidifier.
	No water in tank.	Add at least 2 cups of clean water into the water tank.
	Water level is low.	
Humidifier makes a loud or unusual noise.	Water tank does not fit properly.	Turn off and unplug the humidifier, then align the water tank cap with its matching opening in the inner chamber.
	Water level is low.	Add at least 2 cups of clean water into the water tank.
	Humidifier is not level.	Place humidifier on a flat, level surface.
	Humidifier is malfunctioning.	Turn off, unplug, and stop using the humidifier. Contact **Customer Support** (page 17).
Humidifier produces an unusual smell.	Humidifier is new.	Remove the water cap, and place the water tank in a cool, dry place for 12 hours.
	Residual smell from diffusing essential oil on the aroma pad.	Remove the aroma pad, rinse it under clean water, and allow it to dry.
	Water is dirty, or water has been in the tank for a long time.	Clean the humidifier (see **General Cleaning**, page 13).
Mist is coming out from the base.	Water tank is not positioned correctly.	Turn off and unplug the humidifier, then align the water tank cap with its matching opening in the inner chamber.
High temperature warning is on the display.	The heating element is running without any water in the humidifier.	Unplug the humidifier, add water to the water tank, and turn on the humidifier. If the high temperature warning is still on, contact **Customer Support** (page 17).

TROUBLESHOOTING (cont.)

Problem	Possible Causes	Solution
Relative Humidity (RH) level displayed is incorrect.	Room is larger than the effective range of the humidifier.	Move the humidifier to a room that is within the effective range of 430–753 ft^2 (40–70 m^2).
	Relative humidity in the room is too high.	If the relative humidity in the room is over 68%, set the humidifier to the lowest mist setting or turn off the humidifier.
	Moisture has built up inside of the humidity sensor.	Turn off the humidifier and allow the humidity sensor to air dry before using again.
	The nozzle is facing the direction of the humidity sensor.	Turn the nozzle so that it is facing away from the humidity sensor.
	Humidity sensor is broken or defective.	Contact **Customer Support** (page 17).
White dust appears around the humidifier.	Water being used has a high mineral content.	Use distilled water to fill the humidifier.
	Humidifier was not properly cleaned after last use.	Clean the humidifier (see **General Cleaning**, page 13). Remember to clean the water tank at least once a month.
Puddle of water forms below the base.	Mist setting is too high.	Switch the humidifier to a lower mist setting.
	Room is not well-ventilated.	Open a window to ensure proper airflow for your humidifier, or move the humidifier to a more well-ventilated room.

If your problem is not listed, please contact **Customer Support** (page 17).

WARRANTY INFORMATION

Product Name	Hybrid Ultrasonic Humidifier
Model Number	LV600HH
Default Warranty Period	1 year
For your own reference, we strongly recommend that you record your order number and date of purchase.	
Date of Purchase	
Order Number	

TERMS & POLICY

Levoit warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Levoit will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Levoit is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Levoit and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty
You can extend your 1-year warranty by an additional year. Log onto **www.levoit.com/warranty** and enter your order number (for example, from Amazon or Houzz) to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

Defective Products & Returns
If your product proves defective within the specified warranty period, please contact Customer Support via **support@levoit.com** with your order number. **DO NOT** dispose of your product before contacting us. Once Customer Support has approved your request, please return the unit with a copy of the invoice or your order number.

CUSTOMER SUPPORT

If you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@levoit.com
Toll-Free: (888) 726-8520

Support Hours
Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your order invoice and order number ready before contacting Customer Support.*

Connect with us @LevoitLifestyle






Levoit.com

V6.0

USER MANUAL

True HEPA Air Purifier

Models: Core 300, Core 300-RAC

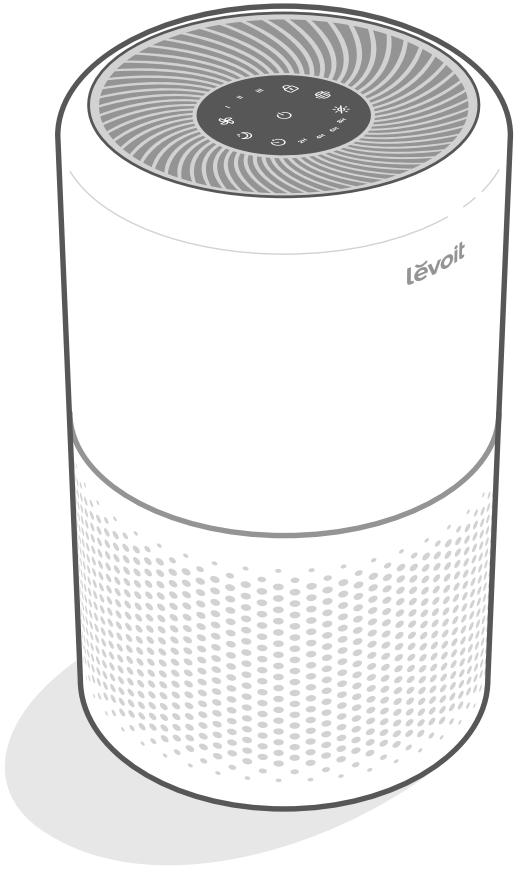

Questions or Concerns?

Please contact us Mon–Fri, 9:00 am–5:00 pm PST/PDT
at **support@levoit.com** or at **(888) 726-8520**.

Table of Contents

Package Contents	**2**
Specifications	**2**
Safety Information	**3**
Getting to Know Your Air Purifier	**5**
Controls	**6**
Getting Started	**7**
Using Your Air Purifier	**8**
About the Filter	**10**
Levoit Replacement Filters	**12**
Care & Maintenance	**13**
Troubleshooting	**15**
Warranty Information	**18**
Customer Support	**19**

Package Contents

1 x Air Purifier
1 x True HEPA 3-Stage Original Filter (Pre-Installed)
1 x User Manual
1 x Quick Start Guide

Specifications

Power Supply	AC 120V, 60Hz
Rated Power	45W
CADR (CFM)	Smoke: 141 Dust: 140 Pollen: 145
Operating Conditions	**Temperature:** 14°–104°F / -10°–40°C
	Humidity: < 85% RH
Noise Level	24–50dB
Dimensions	8.7 x 8.7 x 14.2 in / 22 x 22 x 36 cm
Weight	7.5 lb / 3.4 kg

Air Changes Per Hour	Room Size
5	219 ft^2 / 20 m^2
3	365 ft^2 / 33 m^2
2	548 ft^2 / 50 m^2
1	1096 ft^2 / 100 m^2

READ AND SAVE THESE INSTRUCTIONS

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

General Safety

- **Only** use your air purifier as described in this manual.
- **Do not** use without removing the plastic wrap from the filter. The air purifier will not filter air, and may overheat, causing a fire hazard.
- **Do not** use your air purifier outdoors.
- Keep your air purifier away from water, and wet or damp areas. **Never** place in water or liquid.
- **Do not** use in excessively humid areas.
- Keep your air purifier away from heat sources.
- **Do not** use where combustible gases, vapors, metallic dust, aerosol (spray) products, or fumes from industrial oil are present.
- Keep 5 ft / 1.5 m away from where oxygen is being administered.
- Supervise children when they are near the air purifier.
- **Do not** place anything into any opening on the air purifier, unless directed by the manual.
- **Do not** sit on or place heavy objects on the air purifier.
- Keep the inside of the air purifier dry. To prevent moisture buildup, avoid placing in rooms with major temperature changes or underneath air conditioners.
- **Always** unplug your air purifier before servicing (such as changing the filter).
- **Do not** use your air purifier if it is damaged or not working correctly, or if the cord or plug is damaged. **Do not** try to repair it yourself. Contact **Customer Support** (see page 19).
- **WARNING:** To reduce the risk of fire or electric shock, **do not** use this air purifier with any solid-state speed controls (such as a dimmer switch).
- Children shall not play with the appliance.
- Children should not clean or perform maintenance on the air purifier without supervision.
- This air purifier is not to be used by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for the safety.
- Not for commercial use. Household use **only**.

Power & Cord


- Keep air purifier near the outlet it is plugged into.
- **Never** place the cord near any heat source.
- **Do not** cover the cord with a rug, carpet, or other covering. **Do not** place the cord under furniture or appliances.
- Keep the cord out of areas where people walk often. Place the cord where it will not be tripped over.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet **only** one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to defeat this safety feature.
- If the power supply cord is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 19).
- This air purifier uses standard US 120V, 60Hz outlets. If using outside of North America, check for compatibility.

Electromagnetic Fields (EMF)


Your Levoit air purifier complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

GETTING TO KNOW YOUR AIR PURIFIER

A. Fan Speed Indicators
B. Fan Speed Button
C. Sleep Mode Indicator/Button
D. Timer Button
E. Timer Indicators
F. On/Off Button
G. Display Lock Button
H. Check Filter Indicator
I. Display Off Button
J. Air Outlet
K. Housing
L. Air Inlet
M. Power Cord
N. Filter Cover
O. True HEPA 3-Stage Original Filter

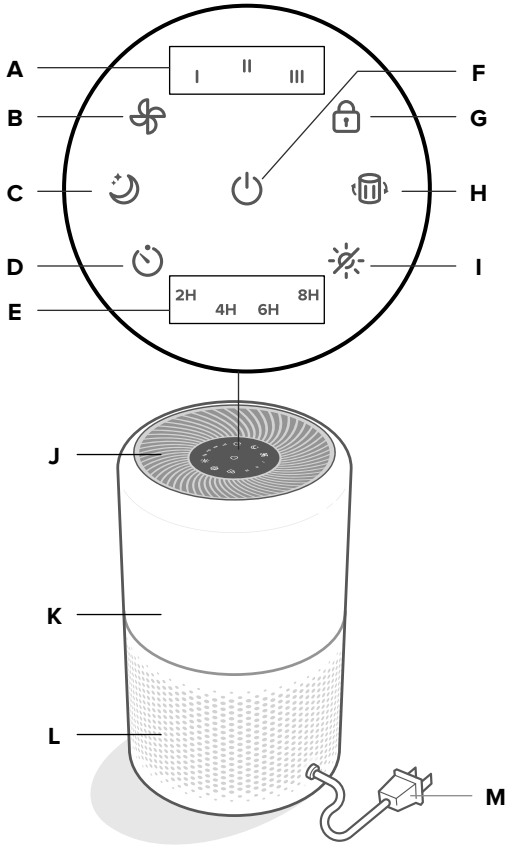

Back

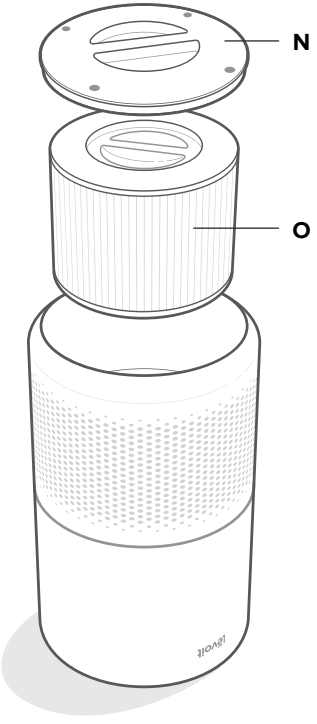

Front, upside down

CONTROLS



On/Off Button
- Turns the air purifier on/off.



Fan Speed Button
- Cycles through fan speeds: I (low), II (medium), and III (high).



Sleep Mode Button
- Turns Sleep Mode on/off (see page 8).



Timer Button
- Cycles through timer options (see page 9).



Display Lock Button
- Prevents current settings from being changed (see page 9).



Check Filter Indicator
- Lights up when the filter should be checked (see **Check Filter Indicator**, page 13).



Display Off Button
- Turns the display off.
- Tap any button (except ⏻) to turn the display back on.

GETTING STARTED

1. Flip the air purifier over. Twist the filter cover counterclockwise and remove it. *[Figure 1.1]*
2. Remove the filter from its plastic packaging and place the filter back into the air purifier with the handle facing up. *[Figure 1.2]*

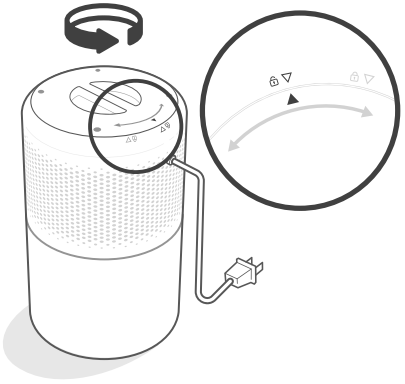


Figure 1.1

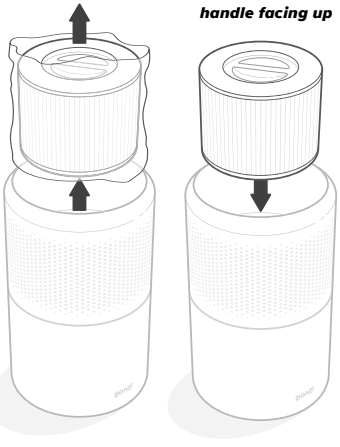


Figure 1.2

3. Replace the filter cover and twist clockwise to lock. *[Figure 1.3]*

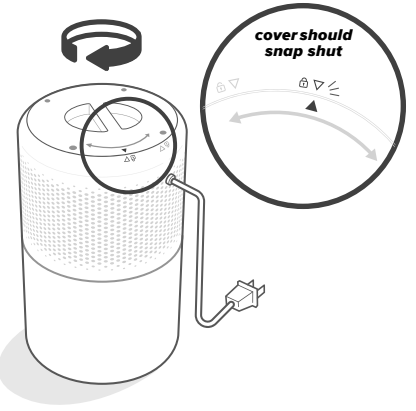


Figure 1.3

USING YOUR AIR PURIFIER

1. Place the air purifier on a flat, stable surface with the display facing up. Allow at least 15 inches / 38 cm of clearance on all sides of the air purifier. Keep away from anything that would block airflow, such as curtains. *[Figure 2.1]*
2. Plug in and tap ⏻ to turn on the air purifier. The fan will start on level I. *[Figure 2.2]*
3. Optionally, tap ✣ to change fan speed between I, II, and III.

Note:

- *The indicators are not buttons and cannot be used to change the fan speed.*
- *The fan speed indicators will light up when active.*
- *Fan speed III is the loudest, but cleans air the quickest.*
- *For best results, or to address a specific air quality issue such as smoke, run the air purifier at high speed (level III) for 15–20 minutes before using a lower speed.*
- *To effectively clean air, keep windows and doors closed while the air purifier is on.*

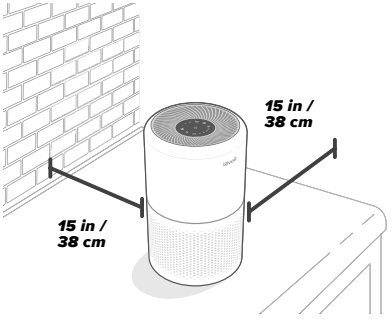


Figure 2.1

4. Tap ⏻ to turn off the air purifier.

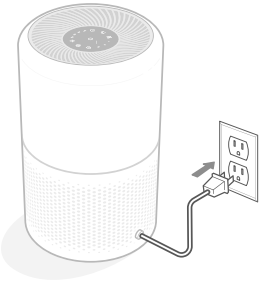


Figure 2.2

Memory Function

When the air purifier is plugged in, it will remember its previous fan speed setting.

Note: *The air purifier will not remember timers or Sleep Mode.*

Sleep Mode

Sleep Mode operates quietly by using the lowest possible fan speed.

- Tap ☾ to turn Sleep Mode on/off.
- Tapping ✣ will exit Sleep Mode.

Note:

- *All indicators will be at half brightness while Sleep Mode is on.*

USING YOUR AIR PURIFIER (CONT.)

Timer

You can set a timer for 2, 4, 6, or 8 hours.

1. Tap ⏲ repeatedly to select a time. The timer will start automatically.

   Note:

   - *The indicators are not buttons and cannot be used to select a time.*
   - *The timer indicators will light up blue when active.*

2. Once the timer has finished, the air purifier will turn off.
3. To cancel a timer, tap ⏲ until all timer indicators are off.

   Note:

   - *You can change the fan speed at any time while the timer is on.*
   - *The timer will restart if the time is changed.*

Display Lock


Locking the display prevents settings from being accidentally changed. Buttons will not respond to being tapped.

1. Tap and hold 🔒 for 3 seconds to lock/unlock the display.

   Note: *You can turn the display on and off even if the display is locked.*

ABOUT THE FILTER

The air purifier uses a 3-stage filtration system to purify air.

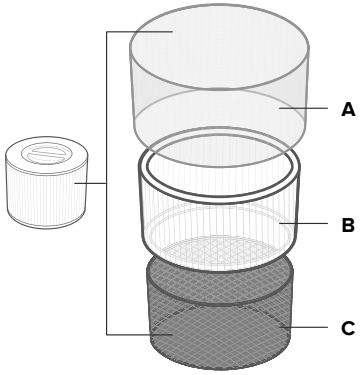

A. Pre-Filter

- Captures large particles such as dust, lint, fibers, hair, and pet fur.
- Maximizes the filter's life by protecting it.

B. H13 True HEPA Filter

- Traps at least 99.97% of airborne particles 0.3 microns (µm) in size.
- Captures 99.99% of bacteria and 99.9% of viruses*.
- Filters small particles such as dust mites, smoke particles, bacteria and viruses**, and allergens such as pollen and pet dander.

**Based on 3rd party testing reports. Results are based on the reduction of the following bacteria and viruses in a chamber 30 m^3 in size: staphylococcus aureus: >99.99% and staphylococcus albus: >99.99% (after running the air purifier for 2 hours), and H1N1: >99.9% (after running the air purifier for 1 hour). Arovast Corporation makes no claims that this air purifier helps reduce or eliminate the transmission of COVID-19.*

***The H13 True HEPA Filter can remove most viruses and bacteria from the air, but cannot fully remove them from your environment. Air purifiers cannot prevent an infected person from spreading an infection, and cannot remove bacteria and viruses from surfaces. Please use this air purifier together with other precautions.*

C. High-Efficiency Activated Carbon Filter

- Physically adsorbs smoke, odors, and fumes.
- Filters compounds such as formaldehyde, benzene, ammonia, hydrogen sulfide, and volatile organic compounds (VOCs).

Clean Air Delivery Rate

Clean Air Delivery Rate (CADR) measures the efficiency of an air purifier by indicating the volume of clean air that an air purifier produces per minute. This is based on removal of dust, pollen, and smoke, which are the 3 most common indoor air pollutants. The higher the CADR, the more particles the air purifier will remove and the larger the area it can clean. The rating is measured at the air purifier's highest speed.

Air Change per Hour

The air change rate is how many times all of the air in a room can be purified (or "changed") by the air purifier in 1 hour. Air changes per hour are calculated on the recommended room size assuming 8 ft / 2.4 m ceilings. For smaller rooms, the air change per hour will increase.

This air purifier can change air 5 times per hour at the max speed in a single, closed room up to 219 ft^2 / 20 m^2 in size. This is measured at ACH 5. The air purifier is effective for larger rooms, but air purification will take longer, with fewer air changes per hour. For example, the air purifier's effective range is 548 ft^2 / 50 m^2 based on 2 ACH, or purifying the air in the room 2 times per hour.

Note: *To effectively clean air, keep windows and doors closed while the air purifier is on.*

Humidity

Moisture may damage the filter. This air purifier should be used in an area with a humidity level below 85% RH. If you use the air purifier in excessively humid areas, the surface of the filter will become moldy.

> ***Note:*** *Water or moisture will allow mold to grow. To solve a mold problem, get rid of the source of the moisture and clean up the mold.*

Essential Oils

Do not add essential oils to the air purifier or filter. The filter will become damaged by the oil and will eventually release an unpleasant smell. **Do not** use oil diffusers near the air purifier.

LEVOIT REPLACEMENT FILTERS

Choose the filter best suited to the environment of your home.

Note: *Your air purifier comes with an Original Filter included.*



Core 300-RF
Levoit True HEPA 3-Stage Original Filter

Traps fine particles such as dust mites, pollen, pet dander, and bacteria while neutralizing common household smells such as pet odors or cooking smells.

Best used for: allergies, dust, minor odors



Core 300-RF-PA
Levoit True HEPA 3-Stage Pet Allergy Filter

Get all the benefits of the Original Filter, with the addition of a High-Efficiency Activated Carbon Filter which is very effective for strong smells, and is customized to address pet odors and cooking smells.

Best used for: pet allergies, unwanted odors



Core 300-RF-TX
Levoit True HEPA 3-Stage Toxin Absorber Filter

Get all the benefits of the Original Filter, with the addition of a High-Efficiency Activated Carbon Filter which is very effective for strong smells, and is customized to address air pollution, cigarette smoke, vehicle exhaust, toxic gases and fumes, volatile organic compounds (VOCs), and smoke from wildfires.

Best used for: high air pollution, smoke

CARE & MAINTENANCE

Cleaning the Air Purifier

Note: Do not *clean with abrasive chemicals or flammable cleaning agents.*

1. Unplug before cleaning.
2. Wipe the outside of the air purifier with a soft, dry cloth. If necessary, wipe the housing with a damp cloth, then immediately dry.
3. Vacuum the inside of the air purifier.

Check Filter Indicator

will light up as a reminder to check the filter. Depending on how much you use the air purifier, the indicator should turn on within 6–8 months. You may not need to replace your filter yet, but you should check it when turns on.

Cleaning the Filter

The outer pre-filter should be cleaned every 2–4 weeks to increase the efficiency and extend the life of your filter. Clean the pre-filter using a soft brush or vacuum hose to remove hair, dust, and large particles. *[Figure 3.1]* **Do not** clean the filter with water or other liquids.

Note: Do not *clean the True HEPA and Activated Carbon Filters.*

Resetting the Check Filter Indicator

Reset the Check Filter Indicator when:

A. lights up.

1. Replace the filter. (see page 14)
2. Turn on the air purifier.
3. Press and hold for 3 seconds.
4. will turn off when successfully reset.

B. The filter was changed before lit up.

1. Press and hold for 3 seconds. This will turn on .
2. Press and hold again for 3 seconds.
3. will turn off when successfully reset.

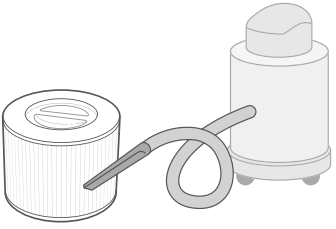


Figure 3.1

Filter	When to Clean	How to Clean	When to Replace
Pre-Filter	Every 2–4 weeks	Use a soft brush or vacuum hose *[Figure 3.1]*	6–8 months
True HEPA & Activated Carbon Filter	**Do not** clean		

When Should I Replace the Filter?

The filter should be replaced every 6–8 months. You may need to replace your filter earlier or later depending on how often you use your air purifier. Using your air purifier in an environment with relatively high pollution may mean you will need to replace the filter more often, even if is off.

You may need to replace your filter if you notice:

- Increased noise when the air purifier is on
- Decreased airflow
- Unusual odors
- A visibly clogged filter

Note:

- *To maintain the performance of your air purifier,* **only** *use official Levoit filters. For more information, contact* ***Customer Support*** *(see page 19).*
- *Remember to reset after changing the filter.*

Replacing the Filter

1. Unplug the air purifier. Flip the air purifier over and remove the filter cover (see **Getting Started**, page 7).
2. Remove the old filter.
3. Clean out any remaining dust or hair inside the purifier using a vacuum hose. **Do not** use water or liquids to clean the purifier. *[Figure 3.2]*
4. Unwrap the new filter and place it into the housing (see **Getting Started**, page 7).
5. Replace the filter cover. The air purifier will not power on unless the cover is replaced correctly.
6. Plug in and turn on the air purifier.
7. Reset the Check Filter Indicator (see page 13).

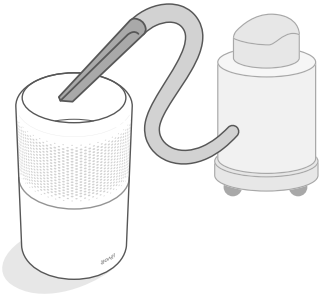


Figure 3.2

Storage

If not using the air purifier for an extended period of time, wrap both the air purifier and the filter in plastic packaging and store in a dry place to avoid moisture damage.

TROUBLESHOOTING

Problem	Possible Solution
Air purifier will not turn on or respond to button controls.	Plug in the air purifier.
	Check to see if the power cord is damaged. If it is, stop using the air purifier and contact **Customer Support** (see page 19).
	Plug the air purifier into a different outlet.
	The air purifier is malfunctioning. Contact **Customer Support** (see page 19).
Airflow is significantly reduced.	Make sure the filter is removed from its packaging and properly in place (see page 7).
	Tap to increase the fan speed.
	Leave 15 inches / 38 cm of clearance on all sides of the air purifier.
	The pre-filter may be clogged by large particles, such as hair or lint, blocking airflow. Clean the pre-filter (see page 13).
	Replace the filter (see page 14).
Air purifier makes an unusual noise while the fan is on.	Make sure the filter is properly in place with plastic packaging removed (see page 7).
	Make sure the air purifier is operating on a hard, flat, even surface.
	Replace the filter (see page 14).
	The air purifier may be damaged, or a foreign object may be inside. Stop using the air purifier and contact **Customer Support** (see page 19). **Do not** try to repair the air purifier.
Strange smell coming from the air purifier.	Clean the filter or replace if necessary.
	Contact **Customer Support** (see page 19).
	Make sure not to use your air purifier in an area with high humidity or while diffusing essential oils.

TROUBLESHOOTING (CONT.)

Problem	Possible Solution
Poor air purification quality.	Tap to increase the fan speed.
	Make sure no objects are blocking the sides or top of the air purifier (the inlet or outlet).
	Make sure the filter is removed from its packaging and properly in place (see page 7).
	Close doors and windows while using the air purifier.
	If the room is larger than 219 ft^2 / 20 m^2, air purification will take longer.
	Replace the filter (see page 14).
is still on after replacing the filter.	Reset the Check Filter Indicator (see page 13).
has not turned on within 8 months.	is a reminder for you to check the filter and will light up based on how much the air purifier has been used (see page 13). If you don't use your air purifier often, will take longer to turn on.
turned on before 6 months.	is a reminder for you to check the filter and will light up based on how much the air purifier has been used (see page 13). If you run your air purifier frequently, will turn on sooner.

If your problem is not listed, please contact **Customer Support** (see page 19).

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

Arovast Corporation hereby declares that this equipment is in compliance with the FCC rules.
The declaration of conformity may be consulted in the support section of our website, accessible from www.levoit.com

WARRANTY INFORMATION

Product	True HEPA Air Purifier
Model	Core 300, Core 300-RAC
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID	
Date of Purchase	

Terms & Policy

Arovast Corporation (“Arovast”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Arovast agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Arovast will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Arovast’s warranty extends only to products purchased from authorized sellers that are subject to Arovast’s quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@levoit.com. DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Levoit product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at **www.levoit.com/warranty**.

This warranty is made by:

Arovast Corporation
1202 N. Miller St. Suite A
Anaheim, CA 92806

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806, USA

Email: support@levoit.com
Toll-Free: (888) 726-8520

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

*Please have your order invoice and order ID ready before contacting Customer Support.

The energy efficiency of this ENERGY STAR certified model is measured based on a ratio between the model's CADR for Smoke and the electrical energy it consumes, or CADR/Watt.



A1_23E18 us