zipSERIES



MGI™

zip NAVIGATOR AT

User Manual

VERSION 4.2

MGI zip NAVIGATOR AT

Thank you for purchasing the Game Changing MGI Zip Navigator All Terrain.
To get the most out of your Zip Navigator AT please follow these quick steps before use.

- Register your Zip Navigator AT online [section 1.0]
- Assembling the Zip Navigator AT [section 3.0]
- Charge the battery [section 4.0]

For Customer Support, please contact MGI directly for immediate and professional advice.

www.mgigolf.com

MGI AUSTRALIA
Service Email: customerservice@mgigolf.com
Live Chat: visit www.mgigolf.com
Toll Free within Australia: 1300 644 523 (excludes mobiles)
Western Australia/ Internal phone +61 3 8872 6700
Local Service Centres: visit www.mgigolf.com
to locate you local service centre.

MGI USA
Service Email: serviceusa@mgigolf.com
Live Chat: visit www.mgigolf.com
Telephone: 1800 617 2990

MGI GLOBAL
Sales Email: globalsales@mgigolf.com
Service Email: customerservice@mgigolf.com
Live Chat: visit www.mgigolf.com

NOTE: *This user manual was correct at time of printing. The online version is the most up-to-date and must be referred to as the correct version. To download the most current user manual please visit www.mgigolf.com. Images shown throughout this manual may not be of the particular model you have purchased.*

Contents

1.0	**Registration**	**04**
2.0	**What Is Included**	**04**
3.0	**Assembling Your Zip Navigator AT**	**05**
3.1	Attaching the Rear Wheels	**05**
3.2	Attaching the Front Wheels	**05**
3.3	Rear Wheel Positions	**06**
3.4	Unfolding	**07**
3.5	Folding	**08**
3.6	Fifth Foldable Rear Wheel	**09**
3.7	GPS Holder and Top Handle Compartment	**09**
3.8	Inverting Rear Wheels	**09**
4.0	**Battery Charging & Connection**	**10**
4.1	Initial Charge	**10**
4.2	Connecting the Battery onto the Zip Navigator AT	**10**
4.3	Charging the Battery after Use	**11**
5.0	**Fitting a Golf Bag**	**11**
6.0	**Operating the Digital Top Box**	**12**
6.1	Top Box Display	**12**
6.2	Start / Stop the Zip Navigator AT	**12**
6.3	Turn the Zip Navigator AT Off	**13**
6.4	Battery Level Indicator	**13**
6.5	Unit Measurements	**13**
6.6	Distance Modes	**13**
6.7	Competition Mode	**14**
7.0	**Remote Control**	**15**
7.1	Charging Your Remote Control	**15**
7.2	Forward Arrow	**15**
7.3	Down Arrow	**15**
7.4	Left and Right Arrow	**16**
7.5	Speed Control – Manually and Remotely	**16**
7.6	Keypad Unlock and Lock	**16**
7.7	Remote Range and Safety Stop	**16**
7.8	Pairing a Remote	**16**
8.0	**Gyroscope Straight Tracker Navigation System**	**17**
9.0	**Warranty**	**17**
9.1	Warranty Policy	**17**
9.2	Warranty Exclusions	**18**
9.3	Parts Installed During Warranty	**19**
10.0	**Preventative Maintenance Program**	**19**
10.1	Cleaning Your Zip Navigator AT	**19**
10.2	Rear Wheel Axles Maintenance	**19**
10.3	Upper and Lower Bag Strap	**20**
10.4	Correcting the Alignment	**20**
10.5	MGI Service Schedule	**20**
10.6	Service Record	**21**
11.0	**Service and Repair Centres**	**22**
12.0	**Purchasing Parts and Accessories**	**22**
13.0	**Contacting MGI**	**22**
14.0	**Contacting Local Agent**	**23**
15.0	**Frequently Asked Questions**	**23**

1.0 Registration

It is important you register your MGI Zip Navigator AT online immediately as registration:

- Records your Zip Navigator AT for warranty purposes
- Speeds up any servicing required on your Zip Navigator AT
- Assists us to contact you with any updates to your Zip Navigator AT

To register your Zip Navigator AT, visit **www.mgigolf.com**

You will need to record your MGI serial number. This is found on the Zip Navigator AT battery base or in the top box compartment.

Please keep this user manual on file for your own reference and a copy of your serial number;

My MGI Zip Navigator AT Serial Number is

[example AZXAT1190001234]

Purchased Date

/ /

You may be required to show proof of purchase so we recommend you keep your receipt with this manual.


2.0 What's Included

- MGI Zip Navigator AT
- 24v Lithium Battery
- Battery Charger
- GPS Holder
- MGI Pouch with:
  – User Manual
  – Accessory Guide


3.0 Assembling Your Zip Navigator AT

3.1 Attaching the Rear Wheels

First, lubricate both axles using the black grease cloth provided in the box. Lubrication of the axles should be performed regularly to keep your cart in optimal condition.

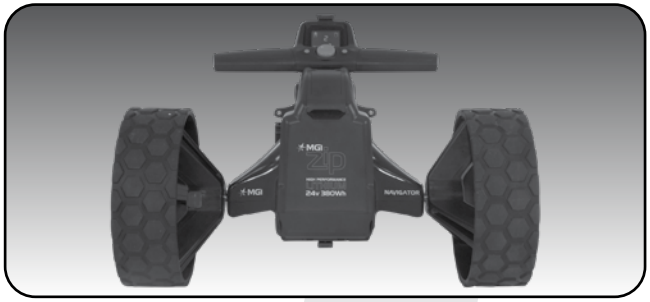

Press the grey release button on the wheel hub. Place the wheel onto the axle. You will need to match up the inner female groove on the axle and the male of the wheel. When placed in position simply release the button. You hear a "click" when the wheel is properly secured. To check that the wheel is properly in position pull on the wheel. If it is properly in position it will not slide off. Repeat for the other wheel.

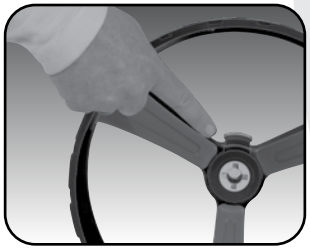




3.2 Attaching the Front Wheels

The two front wheels need to be attached to your MGI Zip Navigator AT. There is no difference between each front wheel so either can be placed on the left or right side. Simply line up the silver pin (with the black O Ring) on the front wheel with the Zip Navigator AT and push into the frame until you hear a positive click. A black button at the front of the Zip Navigator AT frame just above the wheel connection will pop out to confirm the wheel is in the correct position. You can test the wheel is in position by pulling firmly on the wheel. It should not move out of position.






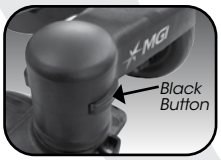

3.3 Rear Wheels Positions

The MGI Zip Navigator AT is designed to allow the rear wheels to be in two positions. The position is determined by where the wheel is locked on the axle in either of the two grooves [see picture]. The drive position is used during the normal operation of the Zip Navigator AT. The free wheel position is used to freely push the Zip Navigator AT should you experience battery or Zip Navigator AT issues on the course.

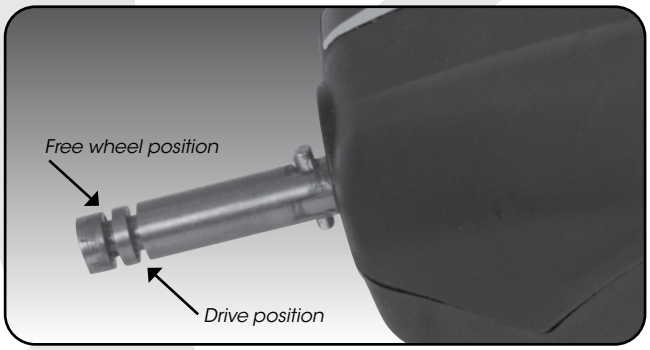


i. Drive position *– Lock the wheel onto the groove closest to the battery base. To do this, press the grey release button on the wheel hub, push the wheel on to the axle as far as possible. To test for drive position try rolling the wheel backwards. If you feel resistance then the wheel is now in drive position and ready to use. Repeat for both wheels.*

ii. Free wheel *– Lock the wheel into the groove closest to the end of the axle. To do this, press the grey release button on the wheel hub, push the wheel on to the axle and push the release button onto the groove. To test for free wheel position try rolling the wheel backwards. The wheel should spin freely with no resistance. Repeat for both wheels.*

3.4 Unfolding

Please see below the steps to unfold a Zip Navigator AT Handle.




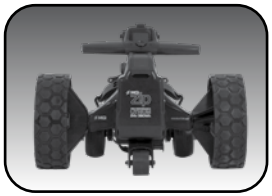

Step 1: Ensure both rear wheels are attached.



Step 2: Release fold lever.

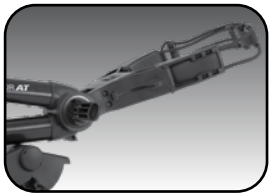


Step 3: Move the top bag support away from front wheel assembly until you hear it click.



Step 4: The handle is now free to pull upwards. The handle will naturally unfold as you continue to pull until the handle is completely open.



Step 5: Ensure that the latch at the bottom of the handle clicks into place.

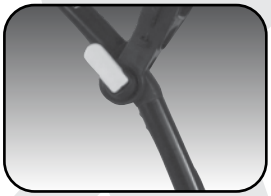

Step 6: Close the fold lever to lock the handle into place in one of three positions.

Step 7: Push the top bag support down to move it into position.

3.5 Folding



Step 1: Disconnect the battery by lifting the battery handle. It can be left on or removed from the Zip Navigator AT.



Step 2: Open the fold lever to release the handle.



Step 3: Pull the latch up at the bottom of the handle.



Step 4: Lower the handle until flat.





Step 5: Push the toggle down on the top bag support and then move the top bag support down so that it locks over the front wheel assembly.



Step 6: Close the fold lever to lock the handle into place.

3.6 Fifth Foldable Rear Wheel

The MGI Zip Navigator All Terrain comes standard with a fifth foldable and extendable rear wheel. This wheel MUST be unfolded and extended into position at all times when the Zip Navigator AT is in use. This will reduce damage to the Zip Navigator AT, and provide the ultimate stability across all terrains. This fifth wheel should be cleaned regularly with a cloth to ensure it can be folded and retracted as required for storage.




3.7 GPS Holder and Top Handle Compartment

In the top handle compartment there is a position for a GPS/ mobile device holder. Open the compartment and connect the holder into position. To open, press the button at the top of the holder. Place the GPS into the cradle, then close the holder by squeezing the two sides closer together.



3.8 Inverting Rear Wheels

The rear wheels can be inverted on the axle to reduce the size of the Zip Navigator AT when folded. To invert the rear wheels, press the grey release button on the wheels hub and remove from the axle. Invert the rear wheels so that the wheels hub protrudes away from the axles. Press the grey release button on the wheels hub and release once the wheel is fitted onto the axle.

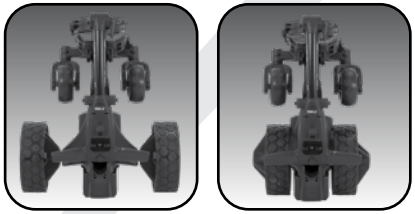

4.0 Battery Charging & Connection

The MGI Zip Navigator All Terrain can only be used with the:

- MGI 24v 380Wh Lithium battery

4.1 Initial Charge

- Before using your MGI Zip Navigator AT for the first time you must fully charge the battery overnight.
- Plug the charger AC lead into a power point - the green LED illuminates to indicate the charger is on.
- Plug the charger output connection into the connector on the front of the battery - the red LED illuminates to indicate it is charging.
- When the charging LED indicator has turned green, the battery is fully charged and ready for use.



Please refer to the battery charger user manual for further information.

4.2 Connecting the Battery onto the Zip Navigator AT

Position the battery on the Zip Navigator AT and push the battery down to secure it.



Push the handle down to connect the battery to the Zip Navigator AT.

Your Zip Navigator AT has been equipped with a fail safe battery connection, so the Zip Navigator AT will not move when you connect the battery. Your Zip Navigator AT will only start once the speed control is switched on.

4.3 Charging the Battery after use

- Disconnect the battery by lifting the handle.
- The battery can be left on or removed from the Zip Navigator AT for charging.
- Plug the charger AC lead into a power point - the green LED illuminates to indicate the charger is on.
- Plug the charger output connection into the connector on the front of the battery - the red LED illuminates to indicate charging.
- When the charging LED indicator has turned green, the battery is fully charged and ready for use.

5.0 Fitting a Golf Bag

Ensure that the top bag support straps are disconnected.
Position the golf bag on the Zip Navigator AT.
Secure the top bag support strap

- Select a good position for the elasticised straps to be put around the golf bag.
- Stretch the longer end of the strap and loop the rounded plastic bar underneath the hook on the shorter end.
- The top bag support straps should now be connected.



Please ensure the top bag support straps are hooked in place securely before releasing. Failure to do so could result in injury to the user.


Adjusting the length of the top bag support strap

The rounded plastic bar on the longer strap can be adjusted to ensure the bag is securely in place.

Secure the lower bag strap and pull the lower bag strap over the base of the golf bag.

6.0 Operating the Digital Top Box

6.1 Top Box Display

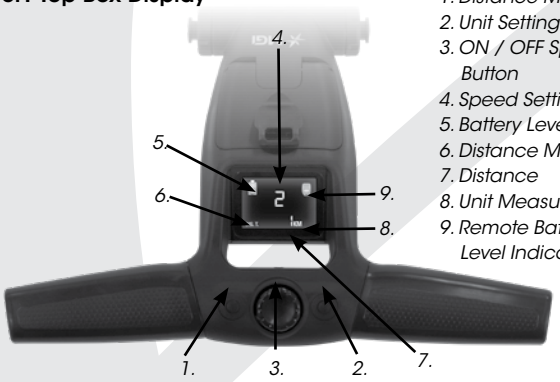

1. *Distance Mode Button*
2. *Unit Setting Button*
3. *ON / OFF Speed Control Button*
4. *Speed Setting Indicator*
5. *Battery Level Indicator*
6. *Distance Mode*
7. *Distance*
8. *Unit Measurement*
9. *Remote Battery Level Indicator*

6.2 Start / Stop the Zip Navigator AT



Zip Navigator AT Speed Control
Please note the following points regarding the Zip Navigator AT Speed Control.

1. To select the desired speed, rotate the speed control button. Turning the speed control button clockwise will increase the speed, whilst anti-clockwise will decrease speed.
2. The speed setting chosen is displayed in the centre of the screen.

Please note you will feel notches as you rotate the speed control. The notches do not indicate a change in speed. The speed will only increase or decrease as the number changes in the display.

3. To start the Zip Navigator AT at this desired speed, tap the top of the speed control button.
4. Another tap will stop the Zip Navigator AT.
5. The desired speed can be altered up or down while the Zip Navigator AT is moving.

6.3 Turn the Zip Navigator AT Off

Zip Navigator AT Battery
Please note the following points regarding the Zip Navigator AT battery.

Connecting the Battery onto the Zip Navigator AT

1. Position the battery on the Zip Navigator AT and push the battery down to secure it. Push the battery handle down to connect the battery to the Zip Navigator AT.
2. To turn the Zip Navigator AT Top Box Display off: Hold down the Start/Stop Speed Control Button and Left Hand Distance Mode Button for four seconds and the display will turn off thereby disabling the Top Box.

Please note that the battery will still be connected to the Zip Navigator AT and will continue to drain whilst connected.

3. Please note that the Zip Navigator AT display will also turn off if the Speed Control is not operated for 30 minutes.

Once again, please note that the battery will still be connected to the Zip Navigator AT and will continue to drain whilst connected.

4. To reactivate the Top Box Display, whilst the battery is connected, hold down the Start/Stop Speed Control Button and Left Hand Distance Mode Button for four seconds and the display will turn on thereby enabling the Top Box.
5. To fully shut down the Zip Navigator AT and prevent the battery from discharging, disconnect the battery by lifting its handle. The battery can be left on or removed from the Zip Navigator AT.

6.4 Battery Level Indicator

Battery indication is located on the left side of the top box screen. Four coloured bars are highlighted showing full charge. The number of bars displayed, indicates the battery life available. You should always check the battery status before you play golf to ensure the four bars are there.

6.5 Unit Measurements

You can change from meters / kilometres / yards / miles simply by pressing the Unit Setting Button [on the right].

6.6 Distance Modes

There are three distance measurement modes. To move between the modes, press the Distance Mode Button [DM] on the left.

Distance A and B: resettable distance measurements can be used to measure how far you hit your shot and to measure how far you have walked for the day. To reset, simply press the DM Button [left side] for 3 seconds until the reading displays "0".
Distance Total: cannot be reset as it is the odometer for the life of the Zip Navigator AT. This feature will assist with service reminders which are recommended at each 500km (310 miles) or 6 month period.

6.7 Competition Mode


In the unlikely event that the club you are playing at does not allow the use of distance devices you will need to disable the distances feature on the MGI Zip Navigator AT.

To disable the distance recording feature, simply hold down the left and right buttons at the same time for 3 seconds and "COMP MODE" will appear on the screen. In addition, the distance recording will be removed from the screen.

To exit COMP MODE hold down the left and right buttons at the same time.



7.0 Remote Control

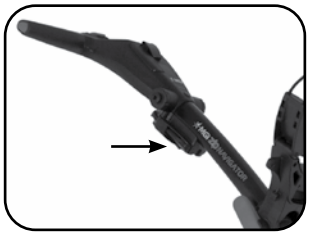

PLEASE NOTE: Your remote control is located in a bracket on the back of the frame just below the T Bar Handle. Use two fingers to remote control from bracket.

7.1 Charging Your Remote Control

Before you start using your Zip Navigator All Terrain you must fully charge the remote control internal lithium ion battery for approximately 6 hours or overnight using the USB cord provided. The top left UNLOCK button will flash while charging. When a full charge is complete, the green light will stay on and stop flashing.

To charge the remote, plug the USB cord into the USB port at the base of the remote as pictured in the diagram. The cable then needs to be plugged into your PC or Laptop for charging. Alternatively you can plug the cable into an AC adaptor [not provided].



To check the level of power in the remote, press any button to talk to the digital top box and the remote control battery level will show on the screen of the Zip Navigator AT.

We recommend recharging your remote battery when recharging your main battery.

7.2 Forward Arrow

Press the forward button to start and accelerate the Zip Navigator AT. The longer you press the button, the faster the Zip Navigator AT travels. The Zip Navigator AT will always start at speed 2 when using the remote.

7.3 Down Arrow

The down arrow decreases the speed and initiates reverse. If you are moving forward, the down arrow can be used to decrease speed, the longer the pressure, the slower the speed.
If you hold down the button the Zip Navigator AT will reverse. If you release the down arrow, whilst the Zip Navigator AT is in Reverse Mode, the Zip Navigator AT will stop [safety feature].

7.4 Left and Right Arrow
When the Zip Navigator AT is stopped, press the appropriate turn command and keep depressed until the degree of turn is achieved, then press the forward button for the Zip Navigator AT to go forward.

Whilst the Zip Navigator AT is moving, press the appropriate turn command, and keep depressed until the degree of turn is achieved. Momentary pressure will make a small adjustment to the direction, whilst prolonged pressure will increase the degree of turn and speed of the turn.

7.5 Speed Control – Manually and Remotely
Under manual control, you can adjust the speed by turning the speed control button clockwise [increase speed] or anti-clockwise [decrease speed]. When changing to the remote control, irrespective of the speed level indicated on the display, the Zip Navigator AT will always start at speed 2.

7.6 Keypad Unlock and Lock
The remote control has two buttons at the top which allow you to LOCK and UNLOCK the keypad. This will help eliminate accidental control when storing the remote in your pocket.
The STOP button will continue to work, when the LOCK feature is activated.

7.7 Remote Range and Safety Stop
The Zip Navigator All Terrain can be remotely controlled up to 100m. If the remote control loses contact with the Zip Navigator AT, then the automatic safety stop will initiate after five seconds. This is for the protection of your Zip Navigator AT, yourself and others. If the Zip Navigator AT was last activated using the manual controls, the auto safety stop feature will not operate. Please note, the top left unlock button will flash every 3 seconds while the Zip Navigator AT is running under remote control.

7.8 Pairing a Remote
If your remote loses pairing with the Top Box or you replace your remote it will need to be paired as follows:

1. Disconnect the Zip Navigator AT battery
2. Hold down the Stop Button on the remote until both the lock and unlock buttons are illuminated – then release the Stop Button.
3. Reconnect the Zip Navigator AT battery
4. The remote will synchronise with the Top Box – the process will be complete once the lock and unlock buttons are no longer illuminated

Please note, if you do not connect the Zip Navigator All Terrain, as per point 3, with a battery, the remote will exit pairing after one minute.

8.0 Gyroscope Straight Tracker Navigation System

The Zip Navigator All Terrain is built with a Patented Gyroscope Straight Tracker Navigation System. This automatic feature ensures the Zip Navigator AT maintains its direction regardless of the terrain. The Zip Navigator AT will automatically brake or accelerate either wheel to maintain its direction.

When the Zip Navigator AT is controlled by the remote, the navigation system is always ON.

When the Zip Navigator AT is controlled manually, the navigation system is always OFF.

Tip: On a steep incline or if the Zip Navigator AT hits a divot or other object, the gradient may force the Zip Navigator AT off line. You do not need to adjust the Zip Navigator AT. The Zip Navigator AT will work its way back on course.

9.0 Warranty

9.1 Warranty Policy
The MGI Zip Navigator AT is covered by a limited 2 year manufacturer's warranty from the date of purchase. Duration of this warranty is:
– 2 years on parts*
– 2 years on Lithium batteries and chargers

*MGI or an authorised service centre will repair or replace any parts found to be defective in materials or workmanship under normal use provided that:

1. The MGI Zip Navigator AT has been properly used, maintained and regularly serviced [see section 10.5]
2. The replacement or repair is performed by an authorised MGI service centre or the owner with MGI approval.
3. The Zip Navigator AT has been registered online.

Our goods come with guarantees that cannot be excluded under Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty is in addition to other rights and remedies available to the consumer under law. The consumer is responsible for expenses associated with a warranty claim. To make a warranty claim, cease using the goods immediately and contact MGI directly using the contact details on the back of this User Manual. Proof of purchase is mandatory.

9.2 Warranty Exclusions
The following events will void warranty:

- Any alteration performed by non-authorised people or companies.
- Fitting of parts or accessories not recommended by MGI.
- Any damage caused by continued operation of the product after it is known to be defective.
- Damage to the seat and/or seat support bracket on the unit.
- Damage caused by partial or complete ingress of water into motor/gearbox and other major components.
- Damage caused by the unit being driven into bunkers, other course hazards or clubhouse and carpark hazards.
- Damage caused by golf balls or golf clubs.
- Application of external force to any part of the unit or battery.
- Fusion of motor or electronics through overload or continual stationary operation.
- All implied warranties [save those preserved by statute] are excluded.
- Liability for consequential damages under any and all warranties are excluded to the extent exclusion is permitted by law.

In the event of submersion in water (partial or full) of your Zip Navigator AT; MGI advises the complete write-off of your Zip Navigator AT.

The cost of replacing the water-damaged components (including labour) exceeds the price of a replacement Zip Navigator AT.

If you elect to purchase replacement components, i.e. motors, gearbox, motor controller and electronics, we advise the replacement of ALL components simultaneously. Replacing individual components on a water-damaged Zip Navigator AT poses a higher risk of future failure of other components and therefore these parts will not be covered under warranty.

Please note that MGI does not warrant water-damaged batteries and, due to fire risk, under no circumstances should they continue to be used.

The following events are not covered under warranty:

Normal wear and tear;
- (e.g. tyres, rubber handlebar, elastic straps, paintwork, battery performance, axles threads, charging ports on batteries and remotes, screen glass etc.)
- Minor appearance defects which bear no effect on the operation of the unit and are considered by the manufacturer to be within the accepted standards.

9.3 Parts Installed During Warranty
Warranty coverage for components installed during a motorised Zip Navigator AT's warranty period shall consist of the duration of the Zip Navigator AT's warranty period, provided the warranty installation is performed by MGI, an authorised service centre or the Zip Navigator AT owner on approval. Replacement of parts under warranty will not extend the warranty of the Zip Navigator AT or parts.

Warranties are non-transferable. The warranty applied to a product, on purchase, is limited to the original purchaser.

10.0 Preventative Maintenance Program

To properly provide for the continued operation of your MGI Zip Navigator AT, MGI has introduced its Preventative Maintenance Program [PMP]. The PMP consists of work to be carried out by both the owner and authorised service centres. To maintain the warranty of your MGI Zip Navigator AT, it is essential that this work is carried out. If the work carried out by the authorised service centre is to replace parts that are part of the maintenance schedule, the owner will be charged for the parts and labour. If the work to be carried out is part of warranty, MGI will bear the cost.

10.1 Cleaning Your Zip Navigator AT [See Maintenance Schedule]
For years of good operation, your Zip Navigator AT requires care and attention:

- Keep your Zip Navigator AT clean by using a cloth with warm water and a mild detergent.
- Do not hose down your Zip Navigator AT under any circumstance, as the Zip Navigator AT has electronic components.
- Ensure that the seat stem bracket is free from sand.
- Do not submerge your Zip Navigator AT in water as it will cause irreparable damage.
- Clean the Zip Navigator AT battery base when the battery is removed from the Zip Navigator AT.

10.2 Rear Wheel Axles Maintenance [See Maintenance Schedule]
The rear wheel stub axles need to be lubricated regularly. Remove the rear wheels by depressing the spring clip and at the same time pull off the wheel. Apply Petroleum Jelly or light grease to the stub axles. Use a very small amount as the grease can attract sand. If you play in sandy conditions you should clean the axle and regrease fortnightly.

10.3 Upper and Lower Bag Strap Maintenance [See Maintenance Schedule]

The bag straps should be replaced as per the Service Schedule. The upper bag strap can be replaced by:

- Removing the left and right hand straps form the upper bag support.
- Undo and remove the screws holding the strap in position on the bag support.
- Remove and replace both bag straps.
- Insert bag strap securing screws.

10.4 Correcting the Alignment

Please see Zip Navigator All Terrain Motor Trimming at www.mgigolf.com.

10.5 MGI Service Schedule

It is the owner's responsibility to ensure that all periodical checks, necessary adjustments and services are carried out. If in doubt please contact the MGI service centre:
Australia 1300 644 523
USA 1800 617 2990

Any work performed on your Zip Navigator AT should be recorded on your service record (see page 21) regardless of the work.

MGI Zip Navigator All Terrain	Monthly	6 Monthly	Every 2 yrs	Every 3 yrs
Wipe down the Zip Navigator AT with a warm cloth after each use [do not hose]	BO			
Lubricate rear wheel stub axles	BO			
Check and tighten nuts and bolts		BO		
Check and tighten handle pivots		BO		
Check alignment of Zip Navigator AT – ensure that it runs straight		BO		
Replace Speed Controller and On/Off switch assembly				BO /SC
Replace rear and front wheels				BO
Replace upper and lower bag straps				BO

BO = Zip Navigator AT owner can carry out this work
SC = Charged work to be carried by approved service centre
BO/SC = The six monthly service can be completed by either an authorised service centre or the owner of the Zip Navigator AT.

10.6 Service Record

6 month inspection	Date: Invoice #:	Serviced by: Signature:
1 year inspection	Date: Invoice #:	Serviced by: Signature:
1 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
2 year inspection	Date: Invoice #:	Serviced by: Signature:
2 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
3 year inspection	Date: Invoice #:	Serviced by: Signature:
3 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
4 year inspection	Date: Invoice #:	Serviced by: Signature:
4 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
5 year inspection	Date: Invoice #:	Serviced by: Signature:
5 ½ year inspection	Date: Invoice #:	Serviced by: Signature:
6 year inspection	Date: Invoice #:	Serviced by: Signature:

11.0 Service and Repair Centres

For all servicing, please do not go back to your place of purchase.

To find your nearest service centre visit www.mgigolf.com

For warranty repairs to be authorised you MUST provide proof of purchase. Please keep this with you as well as your serial number you can record in this manual. It is most important you register your MGI Zip Navigator AT online for warranty purposes.

12.0 Purchasing Parts and Accessories

You are welcome to service your Zip Navigator AT out of warranty, by purchasing parts direct from MGI. Please call or email to discuss the right parts and instructions.

13.0 Contacting MGI

www.mgigolf.com

MGI AUSTRALIA
Service Email: customerservice@mgigolf.com
Live Chat: visit www.mgigolf.com
Toll Free within Australia: 1300 644 523 (excludes mobiles)
Western Australia/ Internal phone +61 3 8872 6700
Local Service Centres: visit www.mgigolf.com to locate you local service centre.

MGI USA
Service Email: serviceusa@mgigolf.com
Live Chat: visit www.mgigolf.com
Telephone: 1800 617 2990

MGI GLOBAL
Sales Email: globalsales@mgigolf.com
Service Email: customerservice@mgigolf.com
Live Chat: visit www.mgigolf.com

14.0 Contacting Local Agent

Please refer to www.mgigolf.com to find the distributor in your country.

15.0 FAQ

Q: My Zip Navigator AT is not tracking straight.
A: Please see Zip Navigator All Terrain Motor Trimming on the www.mgigolf.com website

Q: I would like to have my MGI Zip Navigator AT serviced. Who do I call?
A: MGI AUSTRALIA
Visit www.mgigolf.com to find your nearest service centre using your postcode within Australian and New Zealand. You can also call MGI Head office using any of the contact details. See Section 13.0 for details. Internationals please call your local agent as per Section 14.0

MGI USA
Call 1800 617 2990
Email: serviceusa@mgigolf.com

MGI GLOBAL
Email: customerservice@mgigolf.com

zipSERIES

MGI™

www.mgigolf.com

MGI AUSTRALIA
MGI HEAD OFFICE
11 Maurice Court Nunawading 3131
Victoria Australia

T +61 3 8872 6700 **E** sales@mgigolf.com
SERVICE customerservice@mgigolf.com

MGI USA
T 1800 617 2990 **E** salesusa@mgigolf.com
SERVICE serviceusa@mgigolf.com

MGI GLOBAL
E globalsales@mgigolf.com

Follow us on

Absolute attention has been taken to ensure this manual is correct at time of printing. Specifications, images and statistics may change at any time. Visit www.mgigolf.com for the most current model information. Version 4.2